



# ALUMINUM ALLOY FLEXIBLE LADDER

## USAGE INSTRUCTION


### Elongation steps

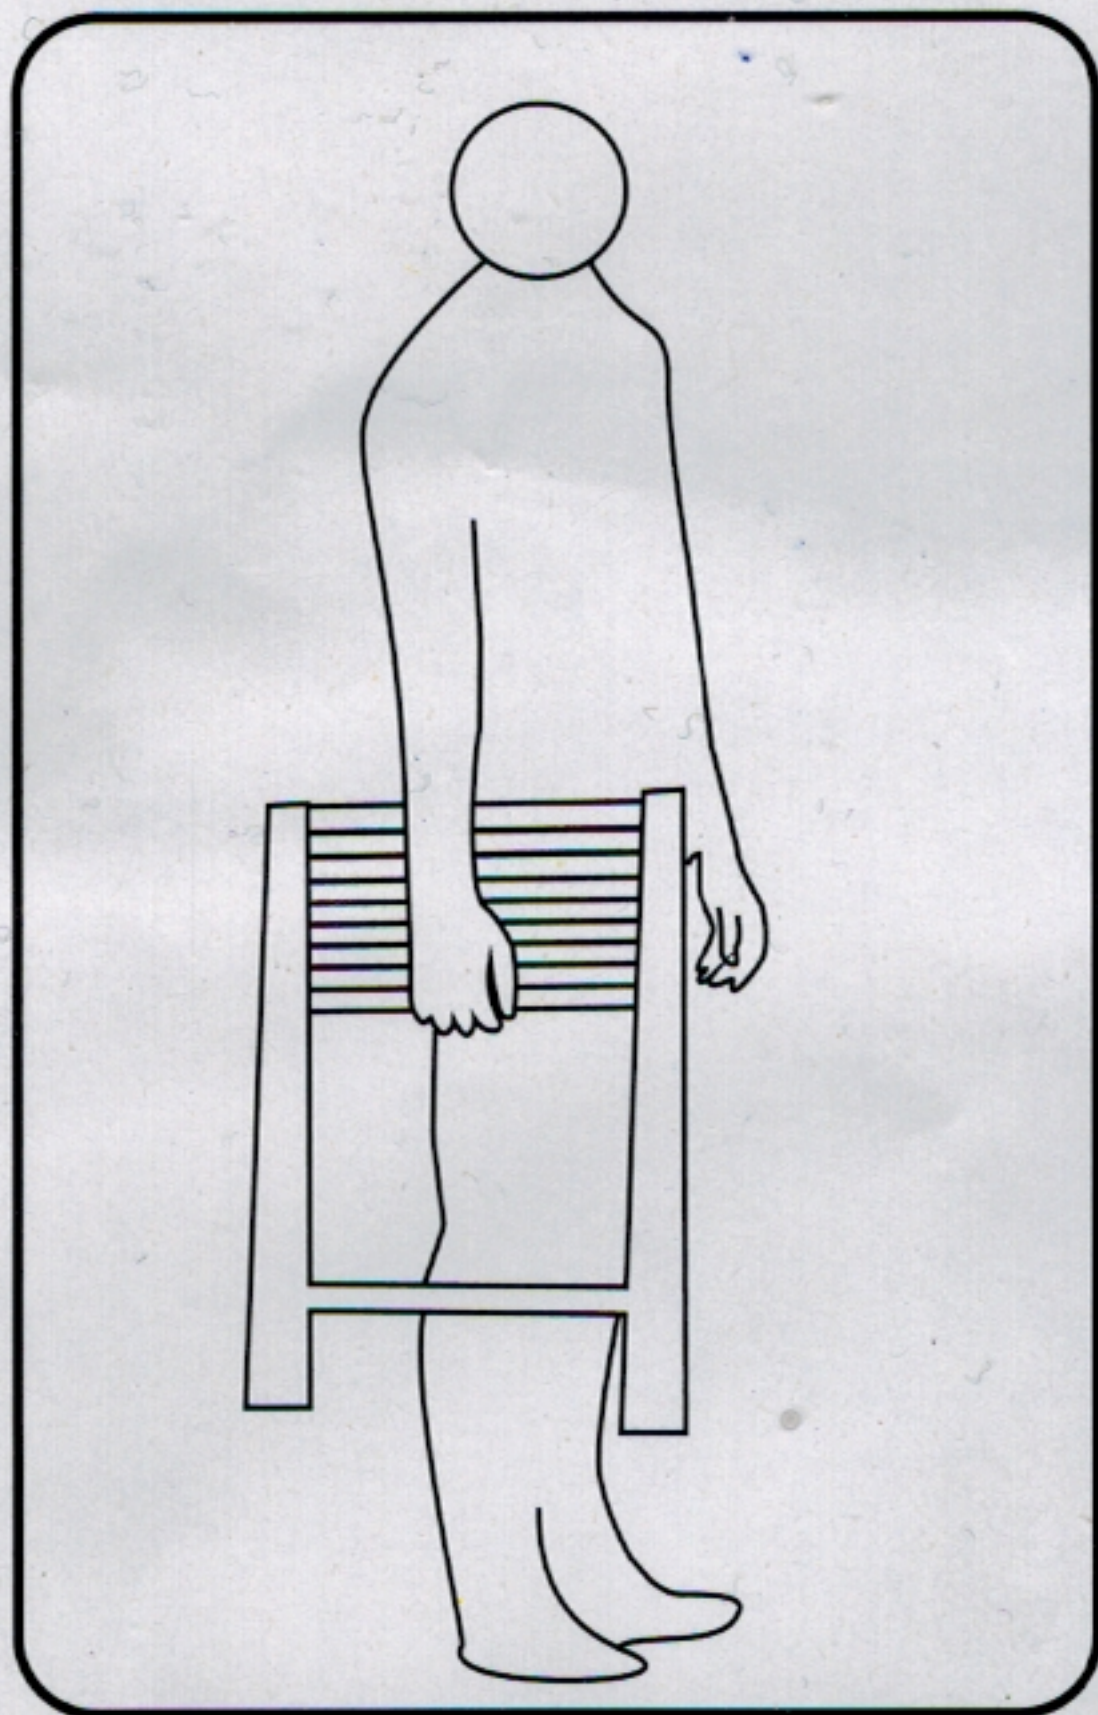

① It is small, light, design humanized, convenient to take and beautiful.

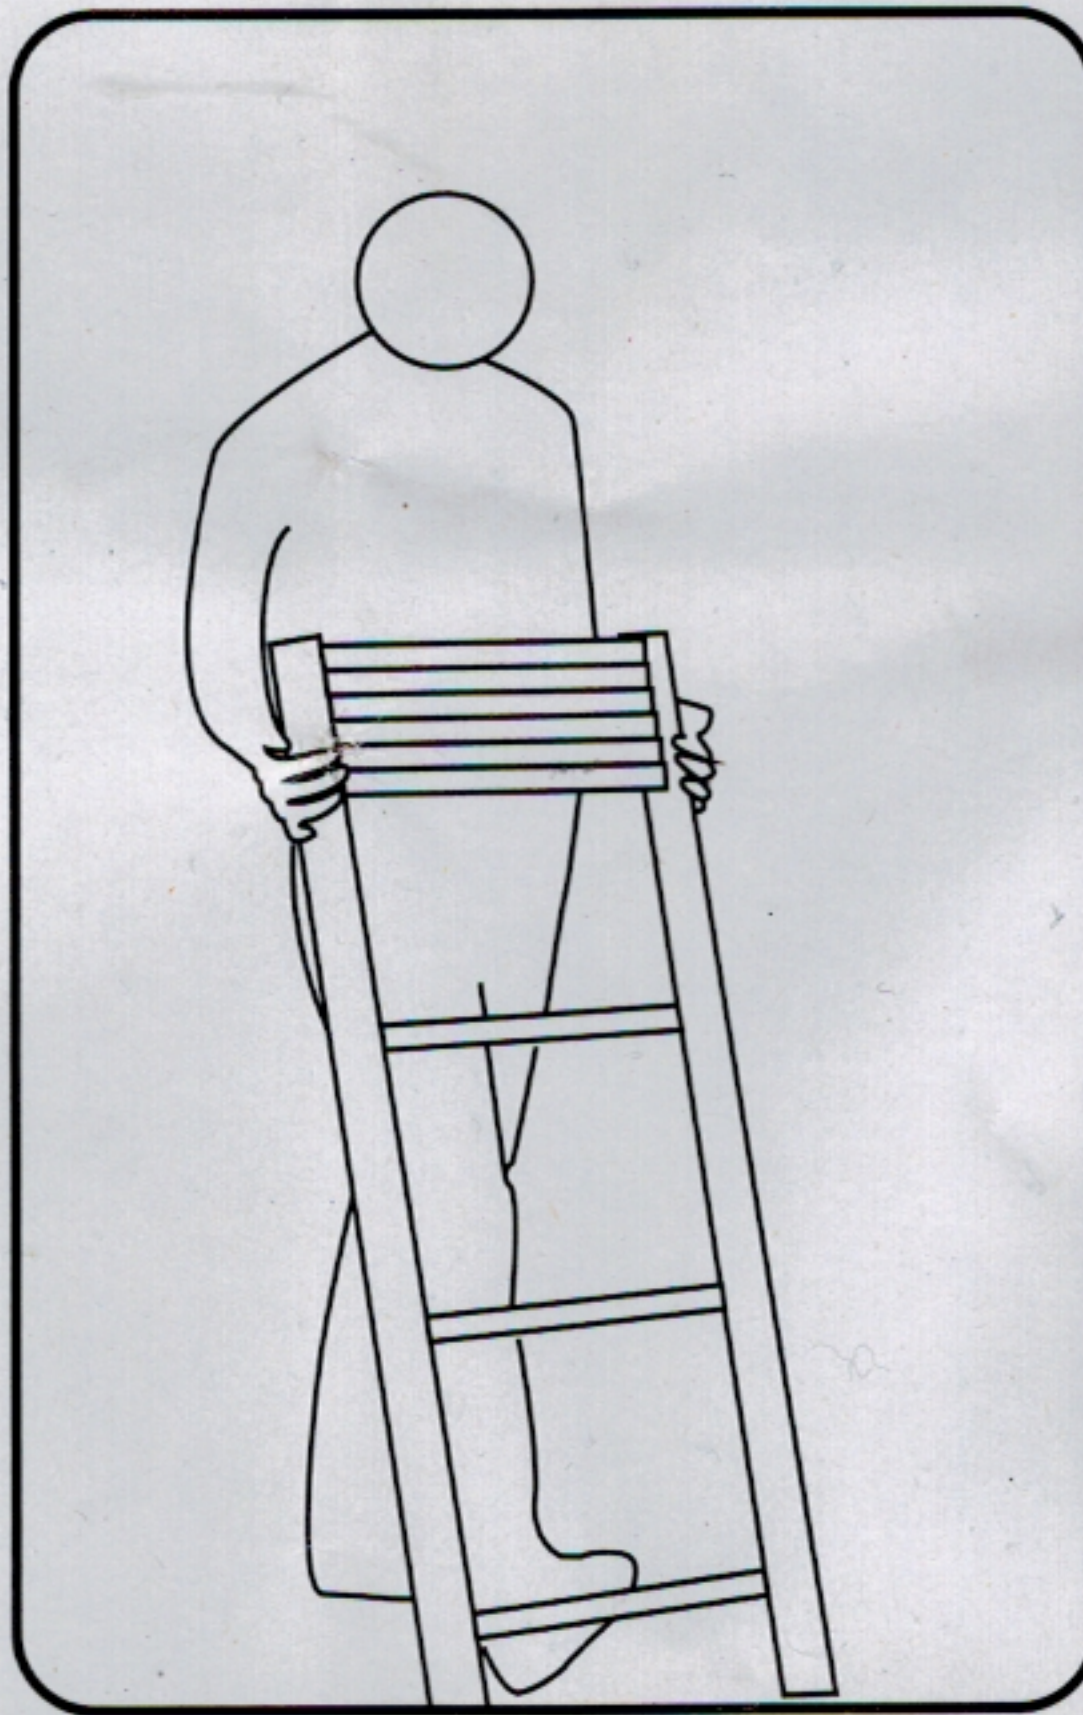


② When open the ladder, you can step on the lowest crosspiece by one foot and lift it upwards horizontally to reach your needed height.

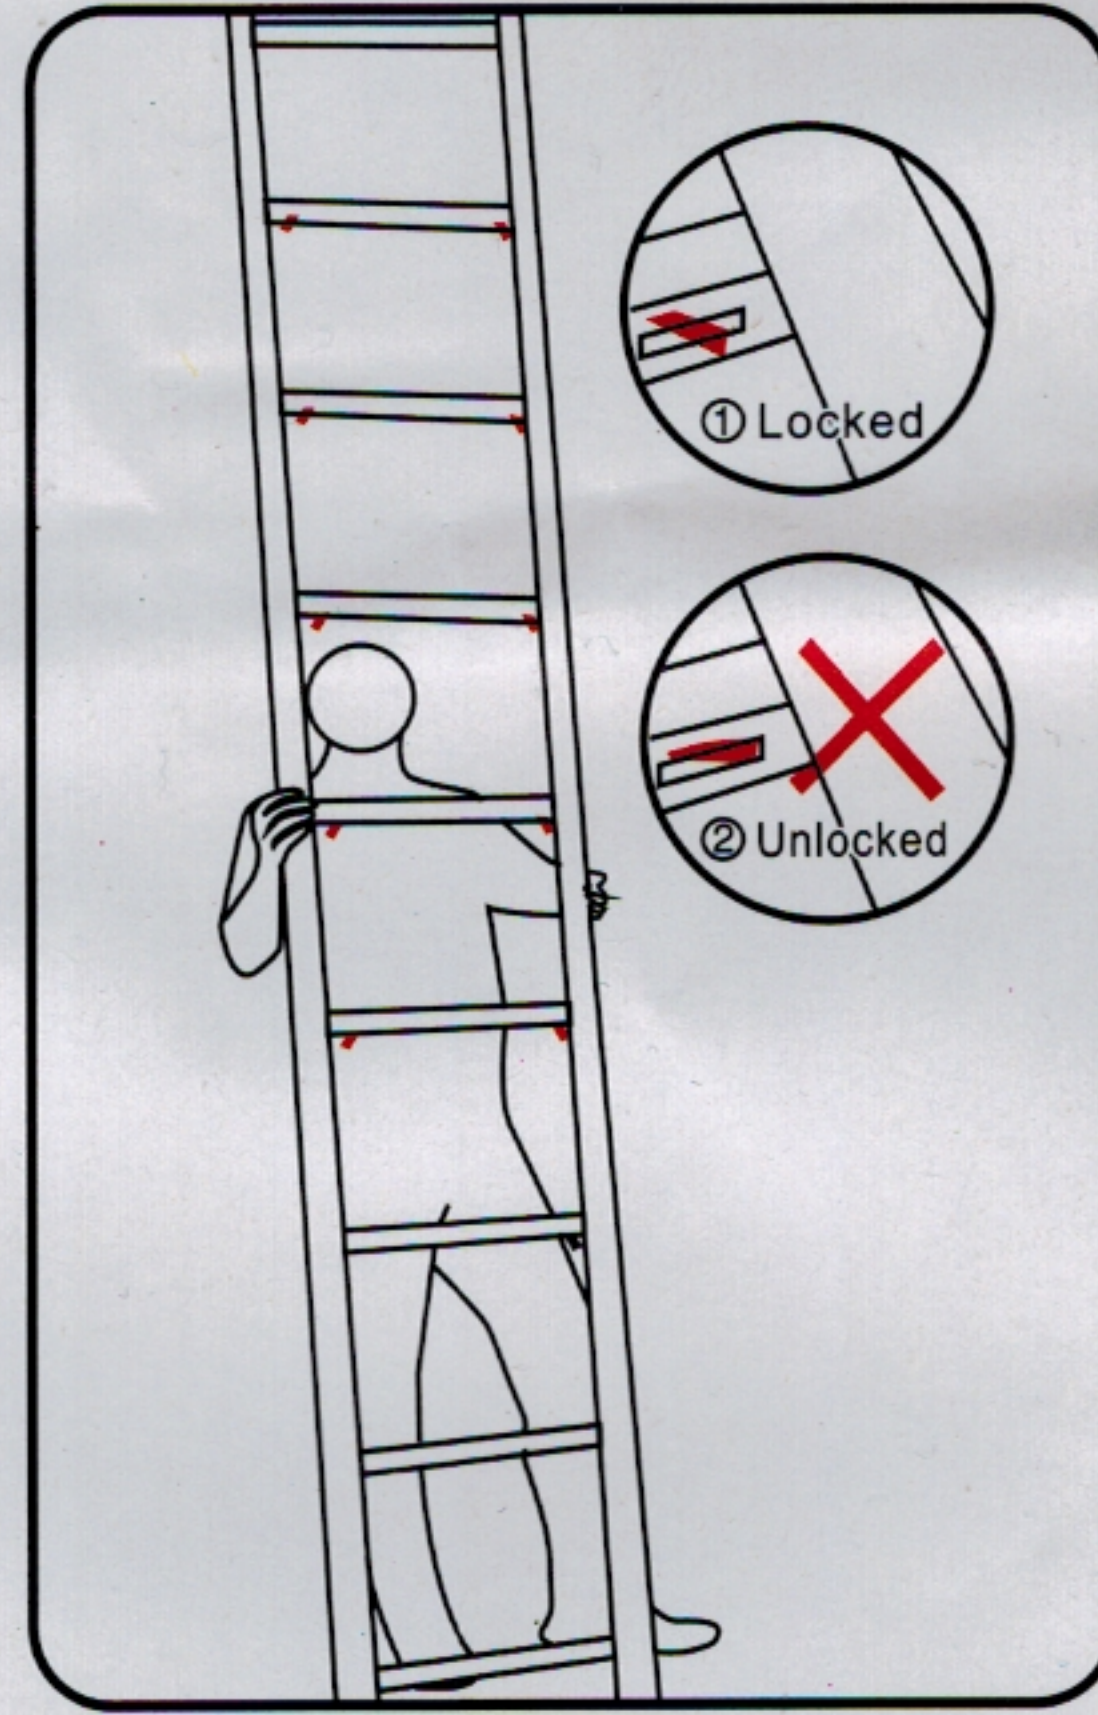


③ It is necessary to check whether the crosspiece is locked before using (It is locked in Figure 1 and unlocked in Figure 2), keeping from the unexpected happened. When using it, the ladder should be 75 degree between floor and ladder.


### Contraction steps

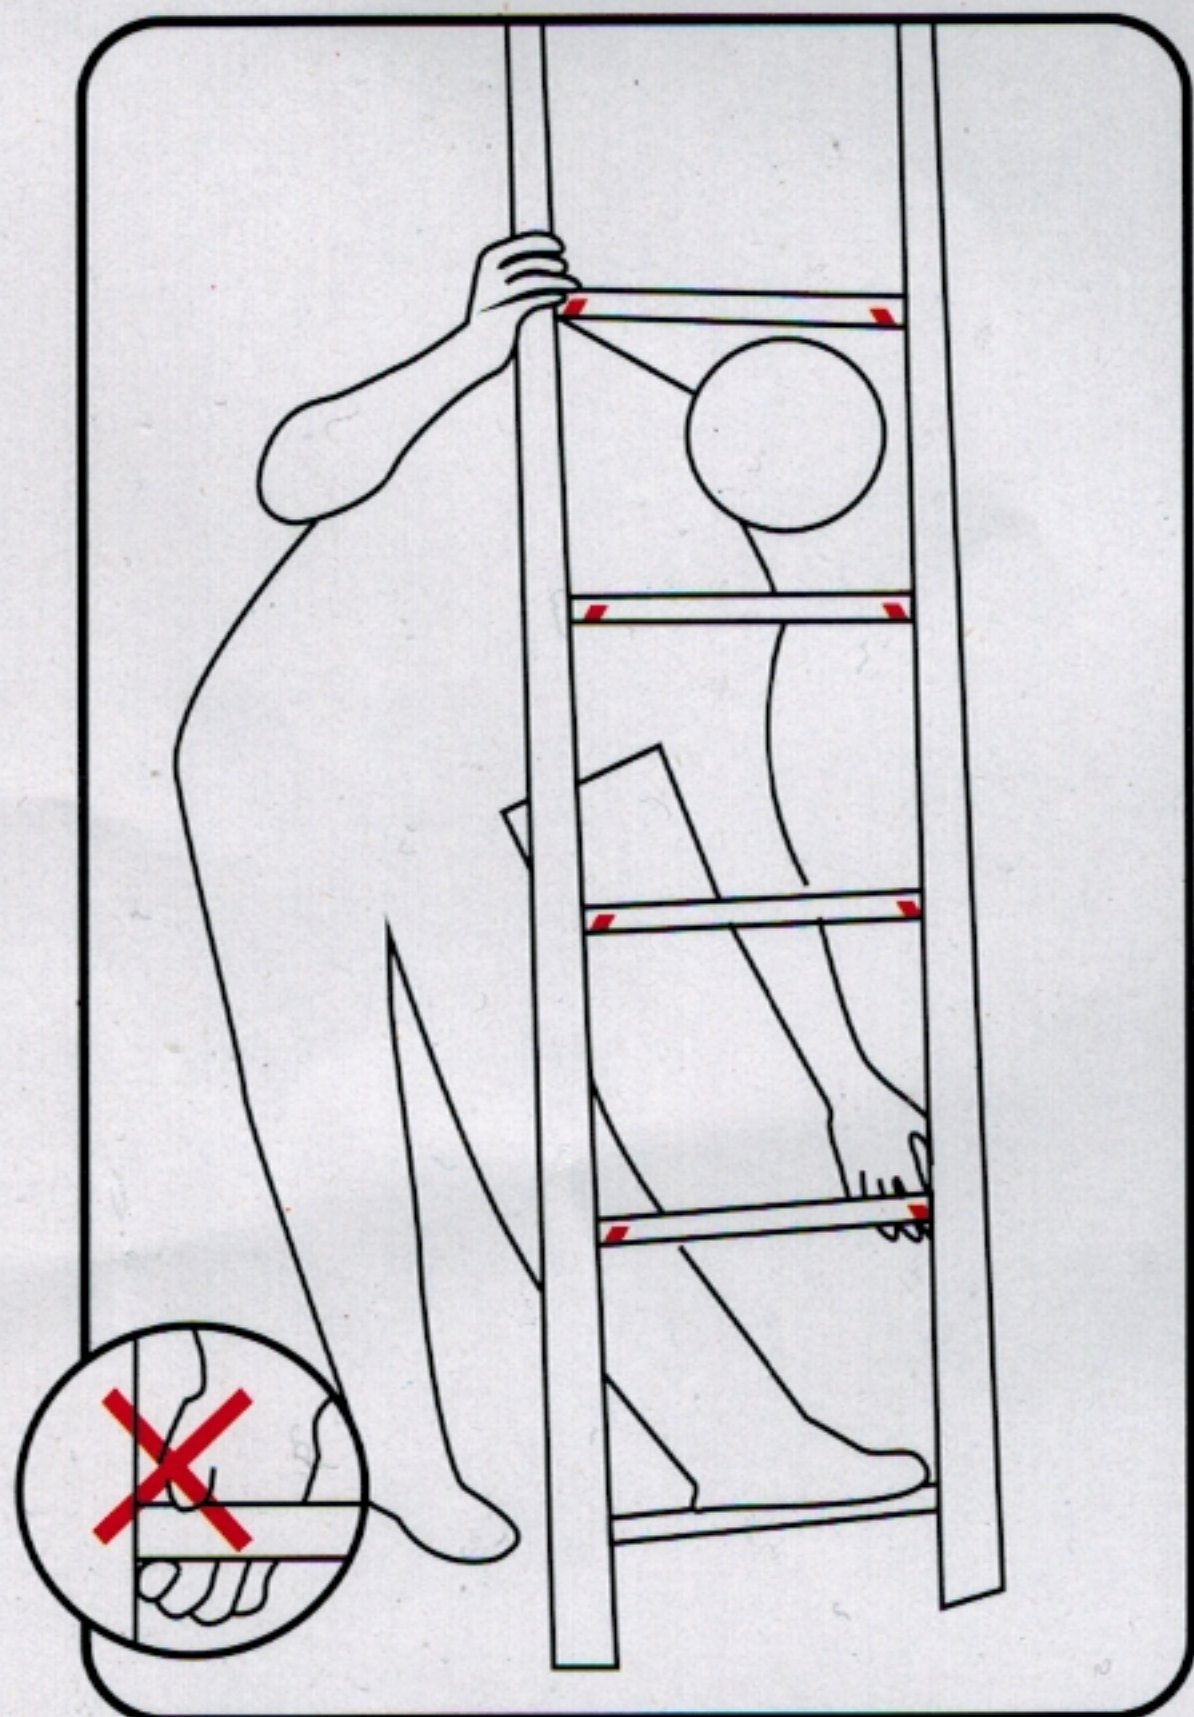

① Step on the lowest crosspiece by one foot, grasp the ladder rod by one hand, and press the left and right switches of the lowest crosspiece. Note(Figure 3): Do not put your hands on the crosspiece when pressing the contraction switches.

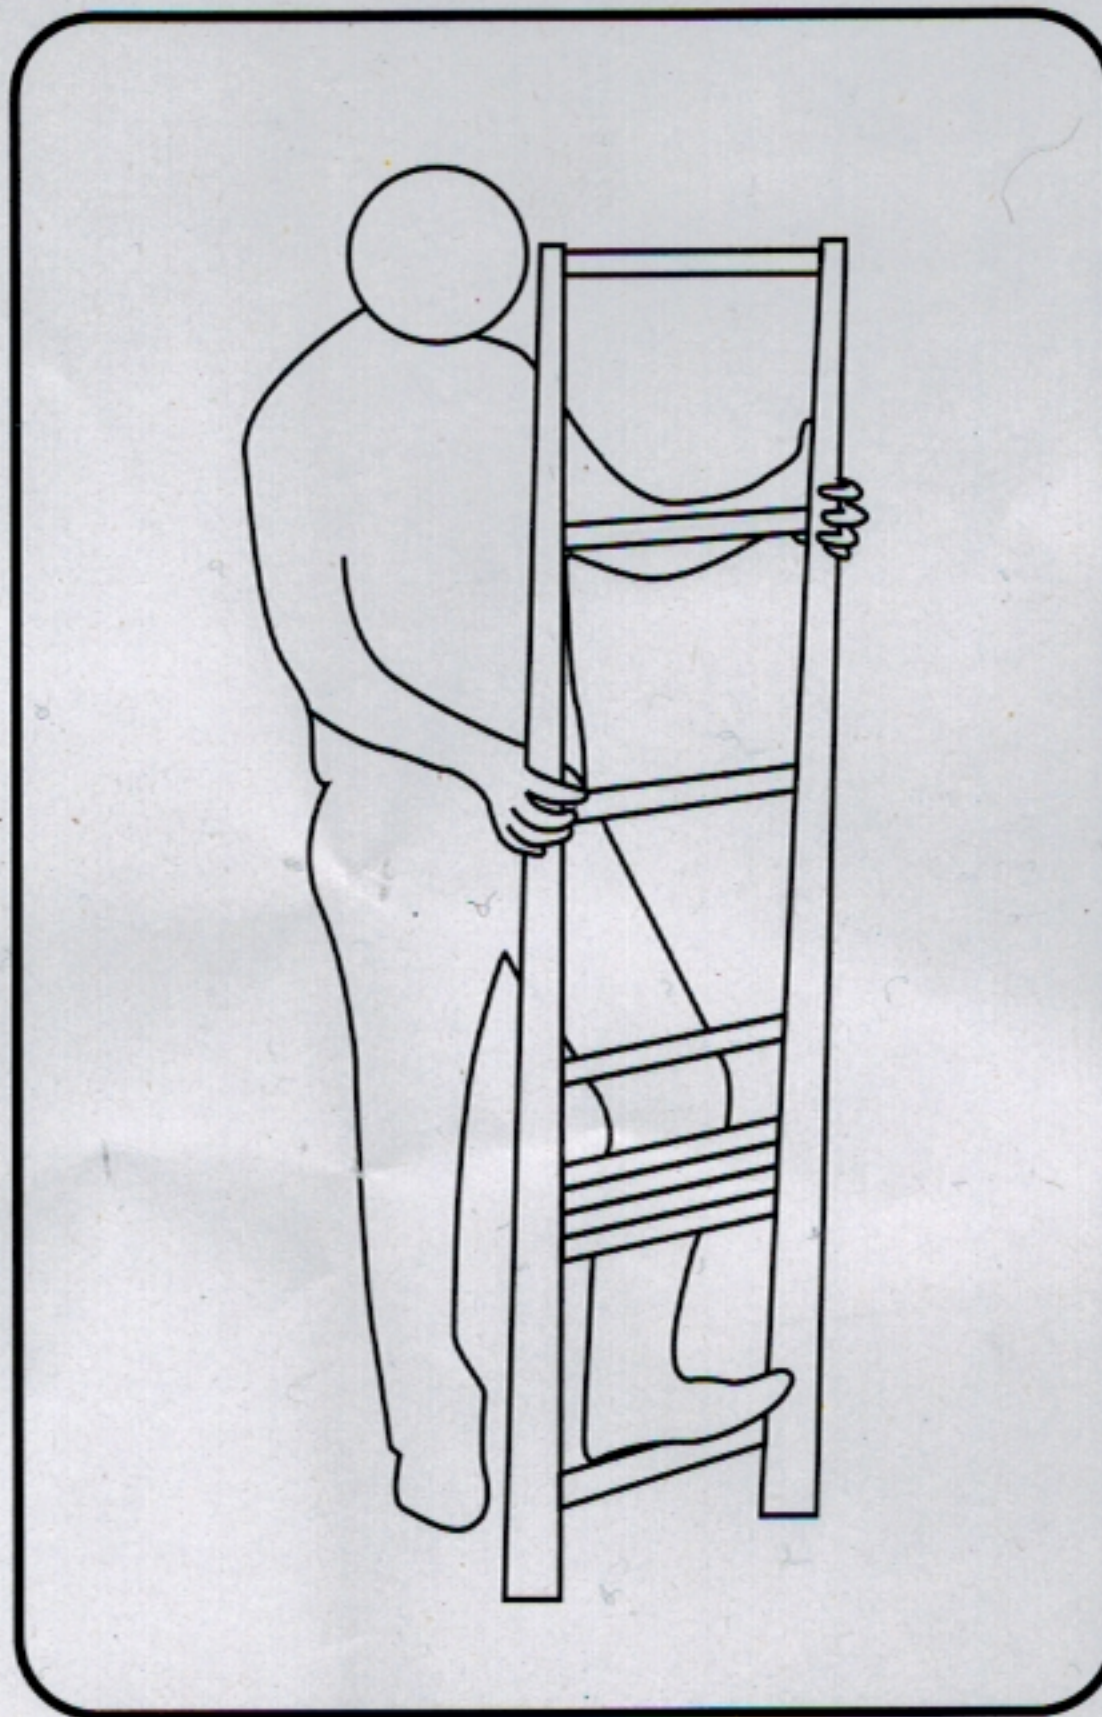

② Grasp ladder rod by hand and the ladder will contract downwards automatically by joint one and another.

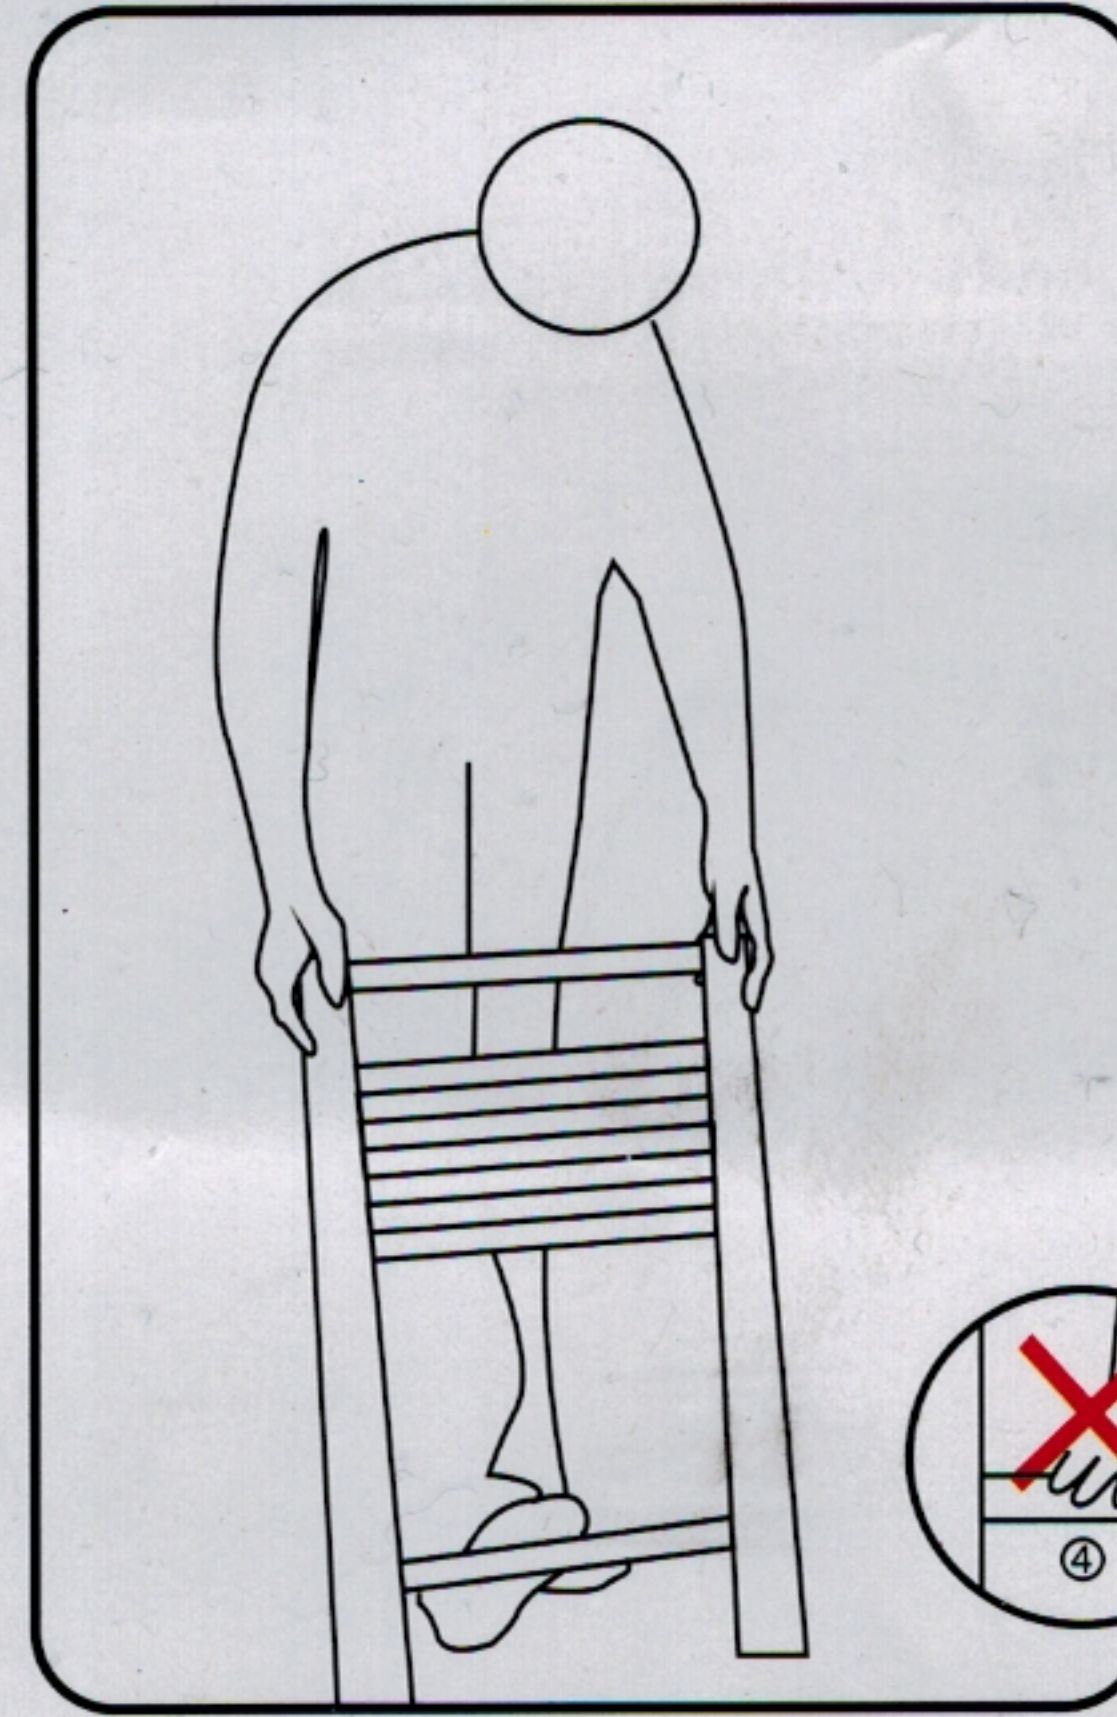

③ When contracting, do not put your hands on the crosspiece, keeping your figures from pressing. (As shown in Figure 4)